



## IMPORTANT

Prior to installing a vented loop, please perform these two simple tests.

- First, remove cap & duckbill.
- Perform both tests.
- When you replace cap and duckbill, be sure that the duckbill is pointing into the vented loop socket, not up into the cap.

