



RAILFAST MODEL 300 M (1- 1/4")

THE 300M ASSEMBLY

The 300M Assembly was designed to give the boater options to support the bottom end of a Man Overboard Pole on his/her railings. **You must have a stern rail close to your backstay for proper use.** The RailFast™ 300M Assembly is packaged assembled. It will be necessary to take it apart prior to installation on your railing. In doing so, you will readily see how it goes together, but please read the instructions through before starting assembly to your rail.

INSTRUCTIONS

Unthread the bolt with the Allen Key supplied. Then pull off the mounting boss (see diagram, reverse side) and the rail clamp form the rail strap assembly.

Once apart, notice that the device consists of the following pieces: (references on reverse side)


- | | |
|------------------|------------------------------------|
| 1) Allen Key | 2) Bolt (S/S 3/8" - 16 x 1 - 1/8") |
| 3) Mounting Boss | 4) Rail Camps |
| 5) Tension Pin | 6) Rail Strap |

A. Locate an accessible position on your rail.

B. Slide the rail strap over your 1 - 1/4" rail. On a horizontal or slanted rail, the square hole should be upward.

C. Insert the tension pin, round end first, through the square hole, keeping the threaded hole of the tension pin at a right angle to the rail.

D. Slide the rail clamp over the ends of the rail strap until snug against your rail. Then slide on the mounting boss and insert the 3/8" bolt. Screw in and tighten with the Allen Key. Tighten to a maximum hand force only. This will assure a tight, secure fit. **DO NOT** use any additional leverage device-maximum hand force is sufficient. Use LocTite™ "Blue" #242 on the threads.

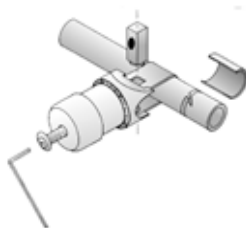

Forespar[®]

22322 Gilberto Rancho Santa Margarita, CA. 92688

Ph: 949-858-8820 Fax: 949-858-0505

www.forespar.com

sales@forespar.com

www.facebook.com/foresparsailing

www.twitter.com/foresparsailing