

WHISKER POLE SIZE RECOMMENDATIONS

WORKING JIB

GENOA

Boat Length	Light to Med. Air	Mod. To Heavy Air	Light to Med. Air	Mod. to Heavy Air
Up to 16 ft	ADJ 4'-8"	ADJ 6'-12"	ADJ 6'-12"	HD 6'-12"
Up to 22 ft	ADJ 6'-12"	HD 6'-12"	HD 6'-12"	LC 7'-15"
Up to 25 ft	HD 6'-12"	HD 6'-12"	ADJ 7'-15"	ADJ 7'-15"
Up to 28 ft	ADJ 7'-15"	ADJ 7'-15"	ADJ 7'-15"	LC 10'-18"
Up to 33 ft	LC 10'-18"	LC 10'-18"	LC 10'-18"	LC 12'-22"
Up to 35 ft	LC 12'-22"	LC 12'-22"	LC 12'-22"	LC 13'-24"
Up to 46 ft	LC 13'-24"	LC 13'-24"	LC 13'-24"	LC 15'-27"
Up to 55 ft	LC 15'-27"	LC 15'-27"	LC 15'-27"	Do Not Use

WHISKER POLES

LINE CONTROL POLES

Part No.	Model No.	Inboard	Outboard	Collapsed Length/Weight	Max. Length	Tubing Diameters
401106	LC 10-18 EL-UXP	EL	UXP	121.75"/18 lbs	218.13"	2" & 2-1/2"
401107	LC 10-18 EL-UTR	EL	UTR	121.75"/18 lbs	218.13"	2" & 2-1/2"
402200	LC 12-22 UXP-UTR	UXP	UTR	148.50"/27 lbs	265.25"	2-1/2" & 3"
402201	LC 12-22 UTS-UTR	UTS	UTR	148.50"/28 lbs	265.25"	2-1/2" & 3"
*800802	LC 12-22 UTS-UTR	UTS	UTR	148.50"/19 lbs	265.25"	2-1/2" & 3"
**402203	LC 12-22 UTS-UTR	UTS	UTR	148.50"/24 lbs	265.25"	2-1/2" & 3"
403200	LC 13-24 UXP-UXP	UXP	UXP	162.00"/38 lbs	272.00"	3" & 3-1/2"
403202	LC 13-24 UTS-UTR	UTS	UTR	162.00"/39 lbs	272.00"	3" & 3-1/2"
*800800	LC 13-24 UTS-UTR	UTS	UTR	162.00"/24 lbs	272.00"	3" & 3-1/2"
**403203	LC 13-24 UTS-UTR	UTS	UTR	162.00"/44 lbs	272.00"	3" & 3-1/2"
405200	LC 15-27 UTS-UXP	UTS	UXP	182.00"/58 lbs	324.00"	3-1/2" & 4"
405201	LC 15-27 UTS-UTR	UTS	UTR	182.00"/58 lbs	324.00"	3-1/2" & 4"
*800801	LC 15-27 UTS-UTR	UTS	UTR	182.00"/32 lbs	324.00"	3-1/2" & 4"
**405203	LC 15-27 UTS-UTR	UTS	UTR	182.00"/58 lbs	324.00"	3-1/2" & 4"

* All Carbon poles

**50/50 Combo poles (carbon inner/aluminum outer)

TWIST LOCK POLES

Part No.	Model No.	Size /Weight
404000	ADJ 4-8	Telescopes from 53" to 93"/3 lbs. 1" outer diameter
404100	ADJ 4-8 DL	With latch fittings on both ends
406000	ADJ 6-12	Telescopes from 72" to 134"/3 lbs. 1-1/4" outer diameter
406100	ADJ 6-12 DL	With latch fittings on both ends
406300	HD 6-12 DL	Two sections extending from 79" to 138" 1-7/8" outer tube diameter With self-latching fittings on both ends /8 lbs
407101	ADJ 7-15 DL	Three sections extending from 84" to 190" 2 in. outer tube diameter With self-latching fittings on both ends /9 lbs



UXP Inboard/Outboard End
UTR Outboard End w/ Trigger



EL Inboard End
on LC10-14 thru 12-22



UTS & TS Inboard End
on 13-24 thru 15-27



FC-125 Flange style car
for 1-1/4" T-track. Used
with EL, UXP, & UTR inboard ends.
Good for vertical storage.



AT-125-S Aluminum Body
T-125-S All stainless steel
for 1-1/4" T-track. Used
with UTS & TS inboard ends.
Good for vertical storage.



RC-125 Ring Car
Solid stainless steel for 1-1/4" T-track.
Used with EL, UXP & UTR inboard ends.
Not for vertical storage



VP-Car For 1-1/4" T-track. Used under
FC-125, AT-125-S & T-125-S style cars.
For vertical storage. Holds pole & stops rattle.
Order per outside pole dia.



**Make Downwind Sailing
Fun, Exciting and Efficient**



Sailing downwind is exhilarating and a great way to get to your destination whether racing or cruising to your favorite anchorage. Using a whisker pole to hold your jib or genoa and go wing on wing is the best use of the combination of both the main and foresail.

**Aluminum, Aluminum/Carbon Combo
and all Carbon Poles Available**



John Kretschmer Professional Passagemaker & Sailing Writer

**"I can't imagine sailing downwind
without my Whisker Pole"**

I make offshore passages for a living and I count on my Forespar® whisker pole. The telescoping feature gives me great flexibility when poling out my headsail. The pole is robust, well engineered and easy to set. When the wind pipes-up I can sail on a deep reach and if it builds more I can simply furl the sail, adjust the pole length and just keep blasting along.

How do you know when it's time to deploy a whisker pole for downwind sailing? When the jib sheet goes limp and you have to head up to get more boat speed or you have had to sheet in until the jib leech is too close to the main and is denigrating its' performance. Then it's time! However, other factors require consideration. In heavy winds giving near hull speed, deploying a pole will only be advantageous after you are way off the wind like 150° apparent. Then again in very light winds and if your pole is long enough, (see Diagram A) you may find advantage as early as 90° to 100° apparent. There is nothing as helpful as some practice and experimentation.

The same suggestion applies to learning to set the pole easily and properly. An adjustable length pole provides advantages in addition to simplifying its' storage. The adjustable poles, the twist-lock and line control models, are preferable to the lock-button type which have limited length choices. A longer length will be used for close reaching with the length being shortened more and more as you go from broad reach to downwind. In general the pole should be kept near 90° to the apparent wind just as with spinnaker pole practice (see diagram A).

When trimming the sheet, keep in mind that very significant compressive loads can be exerted on the pole in strong winds. Please understand that you are creating a force vector on the pole. As a matter of fact, you could, on a still day tied up at the dock with the jib up, crank in the sheet with a winch until you had buckled the pole.



PE-1 Plastic pad eye for
ADJ 4-8 & 6-12 twist lock poles.



PE-3-SF Flat base
PE-3-SC Curved base
Stainless steel pad eye.
For use with poles up to 10-18 size.

**For more in-depth information on the use
and care of whisker poles, please visit the
Tech Tips section on the Forespar® website.**

To get the most lift and best speed out of a poled out jib, trim it until the leech (which is now acting as the luff) begins to curl back just as is done with a spinnaker. As you head more and more on a downwind course there will be a tendency for the jib clew to lift and even oscillate up and down. A fore-guy will help keep the clew at the right height for best boat speed. This height will vary as dictated by apparent-wind speeds and angles or even wave conditions. On smaller boats, say under about 30 feet, the leeward sheet can be tucked under a bow cleat horn and used as a downhaul. On boats 30 ft. and over you should be using both a topping lift and a fore-guy.

Whisker poles cannot be jibed end-for-end as with spinnaker poles. The procedure is to ease the fore-guy, remove the pole from the mast, pass it aft between the mast and what will become the lee shrouds until the forward end can be passed through the fore-triangle and switch the sheet attachment on the forward end of the pole. Then push the pole to weather and reattach to the mast. The sheet trimmer must tend the weather sheet to help control the pole as it is pushed forward else the jib and the pole will be slammed against the head stay. The main should not be jibed until the pole jibe is completed.

When it's time to douse the pole it is pretty much a reverse process. Ease the sheet, detach from the mast, pass the pole aft on the lee side and disconnect from the sheet. The helmsman must not head up until the pole is completely disconnected and off the foredeck.

The pole should be kept level at all times. To accomplish this there will need to be multiple or adjustable mast attachment fittings (track & cars) on the mast except for small day-sailors with a single jib inventory.



STANCHION CHOCK
For use on 1" standard stanchion.
Order per outside pole dia.



MAST POLE CHOCK
Mounted on mast to hold pole when stored
vertically. Use w/ T-125, AT-125 & FC-125
cars, or in conjunction with VP-Car.
Order per outside pole dia.



DC-2 For use on deck w/ EL, UXP or UTR ends.
DC-TS For use with UTS & TS ends only.

Forespar Products Corp.

22322 Gilberto

Rancho Santa Margarita, CA 92688

Phone (949) 858-8820 Fax (949) 858-0505

Email sales@forespar.com Website www.forespar.com

CHOOSING THE POLE & FITTINGS SIZE AND TYPE

Boat Size – up to 16'

HEADSAIL	POLE
Working Jib	ADJ 4-8/4-8 DL
Genoa	ADJ 6-12/6-12 DL

The above poles come with a mast eye. We strongly recommend you use our mast eye with these poles for proper fit. Storage in the cabin or along boom.

Boat Size – up to 22'

HEADSAIL	POLE
Working Jib	ADJ 6-12/6-12
Genoa	HD 6-12 DL/LB or ADJ 7-15 DL

The ADJ 6-12/6-12 DL poles come with the mast eye. Use this mast eye for proper fit. The HD 6-12 DL and ADJ 7-15 DL should be used with PE-3-SF (#400001) stainless mast eye (sold separately). Storage in the cabin (ADJ 7-15 DL can store in SC-200 stanchion chocks sold separately).

Boat Size – up to 25'

HEADSAIL	POLE
Working Jib	HD 6-12 DL
Genoa	ADJ 7-15 DL

Use #400001 PE-3-SC mast eye with above poles or better, the RC-125 ring car (#331000) with 4 to 6 feet of 1-1/4" T-track (#339003) to allow adjustment of the inboard end. Storage in the cabin on the HD 6-12 DL or use SC-200 stanchion chocks with the ADJ 7-15 DL.

Boat Size – up to 28'

HEADSAIL	POLE
Working Jib	ADJ 7-15 DL
Genoa	LC 10-18

PE-3-SF (#400001) or PE-3-SC (#400002) S/S mast eyes two – one high, one low – based on clew heights. Best is the RC-125 S/S ring car (#331000) on 6 to 8 feet of 1-1/4" T-track (#339003) if the pole is to be stored on deck in two DC-2 deck chocks (#300002) or in two SC-200 (#300050) stanchion chocks for ADJ 7-15 DL or two SC-250 (#300042) stanchion chocks for LC 10-18. We strongly recommend a track and car for any boat over 25 feet.

Boat Size – up to 33'

HEADSAIL	POLE
Working Jib	LC 10-8
Genoa	LC 12-22

Use the RC-125 (#331000) and 10-12 feet of 1-1/4" aluminum T-track (#339003). Storage can be on deck using two DC-2 deck chocks (#300002) or with two SC-250 (#300042) stanchion chocks for LC10-18 or two SC-300 (#300043) stanchion chocks for LC 12-22.

Boat Size – up to 35'

HEADSAIL	POLE
Working Jib	LC 12-22
Genoa	LC 13-24

Do not use fixed mast eyes for poles this size

Use mast car RC-125 (#331000) or FC-125 (#332002) with "EL" or "UXP" inboard ends and AT-125-S (#334002) or T-125-S (#333004) toggle cars for "TS" and "UTS" inboard ends. Deck storage: use two DC-2 (#300002) for all poles without "TS" or "UTS" inboard ends. Use one DC-TS-S stainless steel deck chock (#300004) for poles with "TS" or "UTS" inboard ends and one DC-GP-S chock (#300015) or one DC-2 (#300002) for the outboard ends. Also you can store these poles on the stanchions with two SC-300 (#300043) for LC 12-22 or two SC-350 (#300044) stanchion chocks for LC 13-24.

Boat Size – up to 46'

HEADSAIL	POLE
Working Jib	LC 13-24
Genoa	LC 15-27

Do not use fixed mast eyes on poles this size

Use mast car FC-125 (#332002) for all "UXP" style inboard end fittings and AT-125-S (#334002) or T-125-S (#333004) toggle cars for all "TS" or "UTS" style inboard ends. Storage on deck: use two DC-2 (#300002) chocks for all poles without "TS" or "UTS" inboard ends and DC-TS-S stainless steel chock (#300004) with "TS" and "UTS" inboard ends. The DC-GP-S (#300015) or DC-2 (#300002) for all "UXP" and "UTR" style ends. Stanchion chocks are also available for up to 13-24 poles. #300044 SC-350 for LC 13-24 poles. LC 15-27 poles should be stored in deck chocks or up the mast.

Boat Size – up to 55'

HEADSAIL	POLE
Working Jib	LC 15-27
Genoa	*May not be suitable

Mast cars and track are required for use with these poles AT-125-S (#334002) or T-125-S (#333004) toggle cars on 10-12 feet of 1-1/4" T-track (#339003) on the mast. Storage: DC-TS-S stainless steel chock (#300004) for the inboard end and DC-GP-S chock (#300015) or DC-2 (#300002) aluminum chock for the outboard end.

Boats over 55 feet or those who wish to use one headsail size only may consider a fixed length (aluminum or carbon) pole to save weight. The whisker pole should be equal in length to the foot dimension of whichever headsail is used.

Custom carbon fixed length whisker and spinnaker poles can be made for use on larger boats/headsails. Contact Forespar® for details.

*Not recommended for use with large headsails in moderate to heavy air.

ABOUT VERTICAL POLE STORAGE – ON THE MAST

On poles LC 10-18 and above, it may be desirable to store the poles vertically up the mast. This storage option clears the decks and also can make deployment easier, as the pole is always attached to the boat and you are not lifting the pole up from the deck. This storage option has become very popular however, it can cause a few problems or failures if not used with the correct mast cars & components.

The most critical component is the mast car. As the pole must be able to move 180° from side to side and more than 90° up and down (all during extreme compression), this attachment to the mast is every bit as important as your main boom's gooseneck. Any binding of the inboard end with all the leverage the pole has can cause failures of the end fitting, the mast eye/car or both. The mast car must also allow the pole to hang vertically without any torque or binding on the inboard end fitting.

Ring cars will not allow vertical storage of any pole.

The FC-125 and the AT-125-S & T-125-S toggle cars are the only mast cars to allow vertical storage and freedom of movement of the pole under compression loads.

COMPONENTS FOR VERTICAL STORAGE

Pole Size	Inboard End Style	Mast Car	Storage Car (VPC)	Chock
10-18	EL	FC-125	VPC-125-250	DC-2
12-22	UXP	FC-125	VPC-125-300	DC-2
12-22	TS/UTS	AT-125/T-125	VPC-125-300	DC-2
13-24	UXP	FC-125	VPC-125-350	DC-2
13-24	TS/UTS	AT-125/T-125	VPC-125-350	DC-2
15-27	UTS	T-125-S	VPC-125-400	DC-2

The "VPC" storage car is designed to hang 10-12 inches below the FC-125 or AT-125 & T-125-S toggle cars via a wire or rope "tail". It is then hauled up and down the track in tandem with the mast car. As the pole comes to vertical, the VPC car's chock engages the pole up high and stops the mast cars side movement. Without this, the pole is allowed to rattle and roll on the car and can drive you crazy with noise at anchor! (see diagram B).

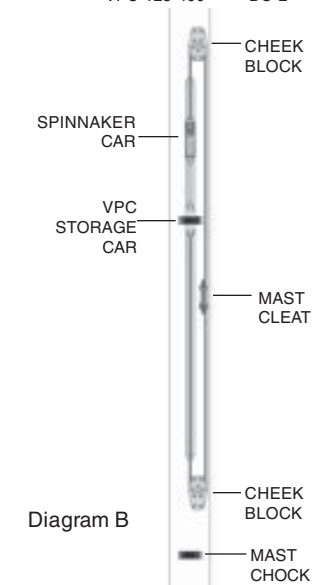


Diagram B

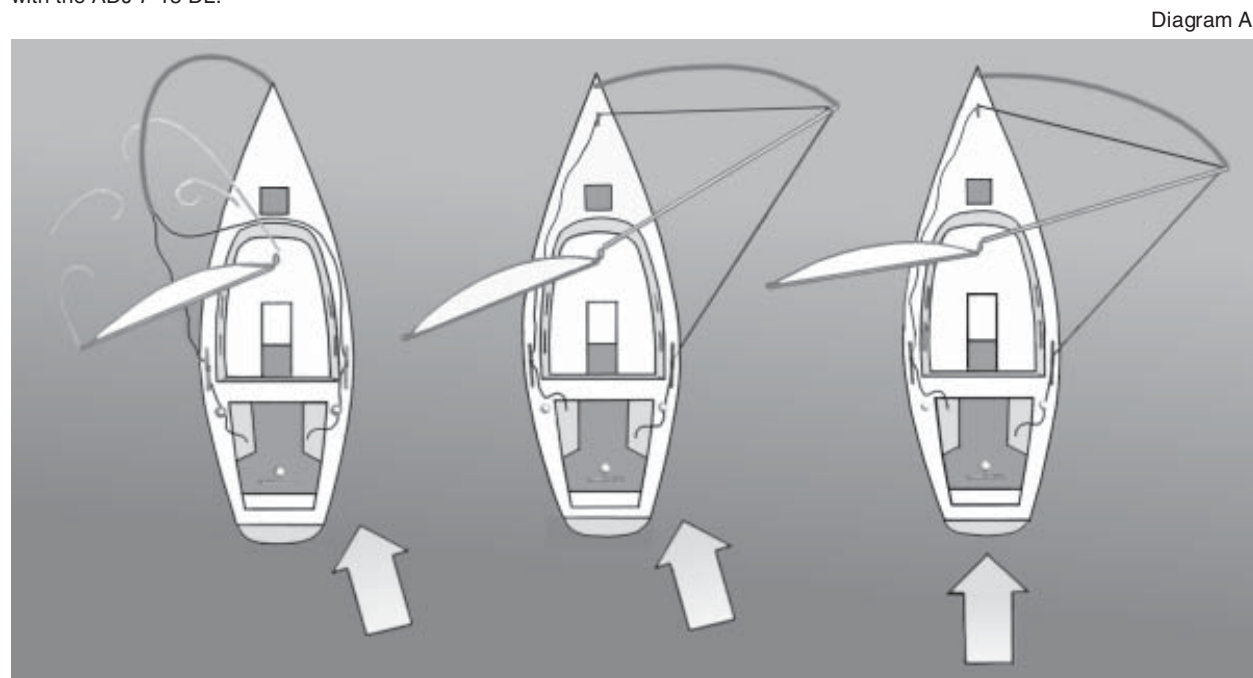


Diagram A